

# ProtoThrottle

Realistic Control Stand Throttle

## MANUAL

Updated 6/18



IOWA SCALED ENGINEERING – ELECTRONICS MADE EASY!

[www.protothrottle.com](http://www.protothrottle.com)

## **Thank you for purchasing the ProtoThrottle.**

Our goal was to design and develop a wireless throttle that provides the diesel modeler with the most realistic experience operating their model locomotives.

The ProtoThrottle mimics a standard EMD control stand including full detent throttle and reverser handles, a spring-loaded horn handle, a push-on/push-off bell button, and fully programmable front and rear headlights with a setting for ditch lights. In addition, the ProtoThrottle comes with a robust faceplate machined from aluminum, including prototype bezels, and anodized to give the look and feel of a real control stand.

The ProtoThrottle comes with our commitment to your satisfaction. We warranty the throttle from manufacturing defects for one year, and if you should have any questions or issues with the ProtoThrottle, please contact us.



**Scott Thornton**


**Michael Petersen**

**Nathan Holmes**

# Table of Contents

ProtoThrottle Controls & Battery Install	4
Quick Start Guide	5
Main Screen	6
Engine Menu	7
Tonnage Menu	8
Load / Save Configuration Menus	9
Set Locomotive Menu	10
Force Function Menu	11
Configuration Function Menu	12
Notch Configuration Menu	14
Options	15
Threshold Calibration Menu	17
Communication Configuration Menu	18
Preferences Menu	19
Diagnostics Menu	21
Menu Map	23
Electronics Schematic	24
Licensing / Support	25
Open Source Development	26
Notes	27


# ProtoThrottle Controls & Battery Install

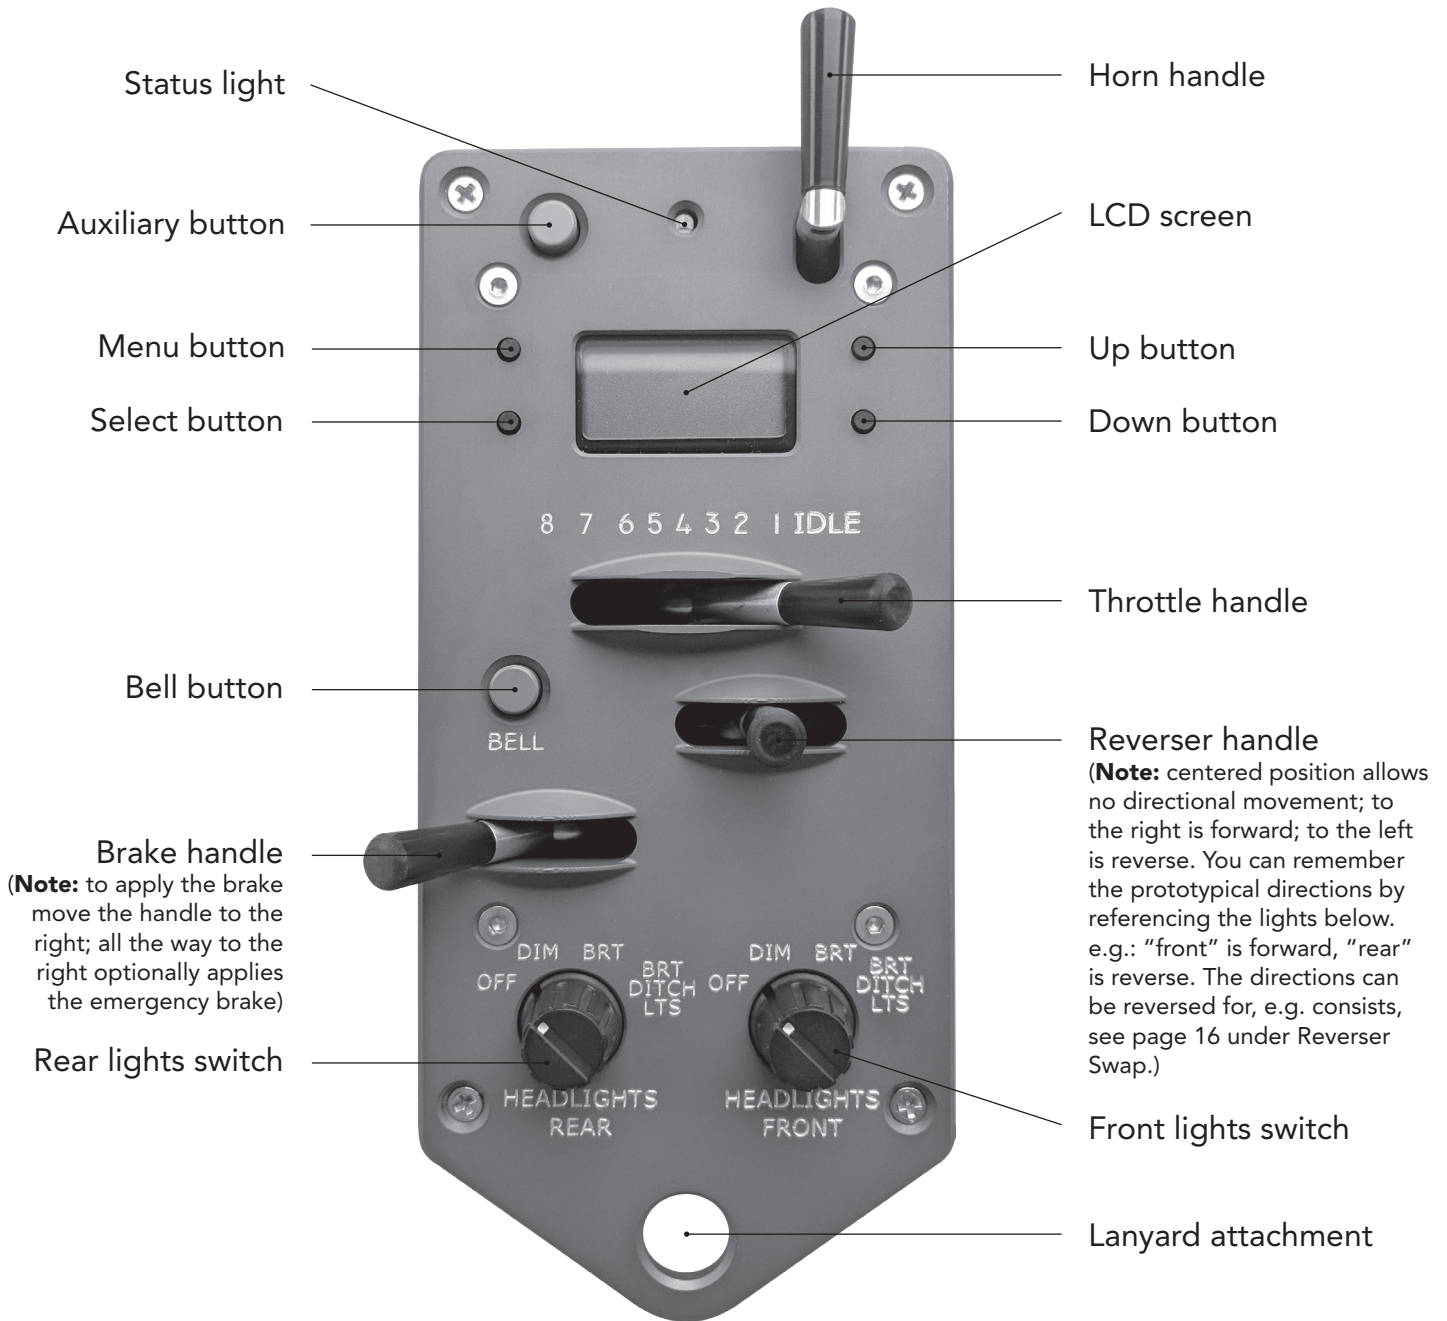

The ProtoThrottle is powered by 2 AA batteries (not included). The batteries can be alkaline or rechargeable NiMH.

To access the battery holder, unscrew the 4 phillips head screws on the corners of the throttle's faceplate; remove the box; **IMPORTANT:** when removing the batteries from the holder, use one hand to hold **both** sides of the holder to prevent it from bending away from the printed circuit board; insert batteries and reattach the box. **Do not over tighten the screws.**

**To conserve battery life:** make sure the throttle handle is in "idle" position and the reverser handle is in "centered" position when not in use. This will cause the throttle to go to sleep after 5 minutes.

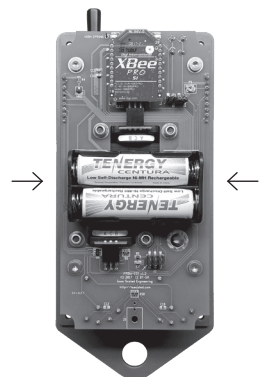

# Quick Start Guide

The ProtoThrottle will work with any scale and with sound- or non-sound decoders (though using sound enhances the control stand experience significantly). Any DCC decoder compatible with the NMRA standards will work with the ProtoThrottle because it uses standard DCC commands and functions via your command station.. The ProtoThrottle is not a DCC system and will not replace the system you use.

**NOTE: if the ProtoThrottle is in "sleep" mode the LCD screen will be dark, click any of the LCD buttons to wake the throttle.**

Check the Iowa Scaled Engineering website for the most current list of supported DCC command stations: [www.iascaled.com](http://www.iascaled.com)

1

1. Configure your ProtoThrottle receiver using the instructions provided with the receiver.

2. Make sure the base address of the ProtoThrottle matches that of the receiver. (See page 18.)

3. If using multiple ProtoThrottles, set each throttle to a unique ID. (See page 18.)


2

Using your DCC system, **set acceleration momentum (CV3) mid-range to moderately high** so that the ProtoThrottle will need to "notch up" to get the train moving.


**Set deceleration momentum (CV4) high or maximum.** This will allow the train to "coast" when the throttle is in the idle position requiring the use of the brake to slow or stop the train.

3


### Input the locomotive number into the ProtoThrottle:



1. Click the Menu button 5 times




2. Click the Select button once




3. Use the Up and Down buttons to change numbers



4. Use the Menu button to move cursor right



5. After number is input, click Select button to save




**NOTE:** see page 10 for how to set a short (primary) address.


**NOTE: the ProtoThrottle function settings are set to standard DCC function numbers by default. If you need to change any function number, the steps are explained below:**

4


### To check or set the horn, bell, and brake function numbers:




1. Click the Menu button 7 times




2. Click the Select button once



3. Click the Up or Down button to change the function number



4. Click Menu button to toggle through the other function choices. Repeat step 3 to change additional function numbers.



5. Click the Select button to save all changes

5

### Enjoy operating your locomotive!

**Please read the entire manual to familiarize yourself with all the features of the ProtoThrottle.** See our website for more specific instructions on programming lights and our future tonnage feature.

In addition, our website has detailed operational scenarios developed by professional locomotive engineer, Tim Garland. If you are not familiar with prototype operation from an engineer's perspective, Tim's scenarios will give you insight on how to operate more realistically using the ProtoThrottle.



## ELEMENT

## DESCRIPTION

0250

Locomotive Address. Long (extended) addresses are displayed directly (e.g. 0250 0000 9999). Short (primary) addresses are displayed with an 's' prefix (e.g. s003 s000 s127).

In certain situations the locomotive address may be replaced by an alert message:

EMRG Emergency stop is active!

**Note:** move the brake handle all the way left to deactivate.

REV! Reverser was moved with the throttle not in idle

12:00#

The ProtoThrottle acts as a secondary display for Iowa Scaled Engineering's wireless fast clocks [www.iascaled.com/store/MRB-FCM](http://www.iascaled.com/store/MRB-FCM) or the fast time provided by the NCE Cab Bus.

# 12-hour mode AM indicator

¶ 12-hour mode PM indicator

No AM or PM indicator when in 24-hour mode.



Battery Status

■ Batteries good   ■ Batteries low   □ Replace batteries



Up/Down Button Status. On the main screen, the Up and Down buttons can be assigned to functions. The on/off status of those assigned functions are displayed on the LCD screen.


□ Function off

■ Function on

**Note:** pressing and holding the Menu button (upper left LCD button) momentarily will return you to the main screen from any of the main menus.

Advance to Engine Menu ●

Toggle backlight on / off ●

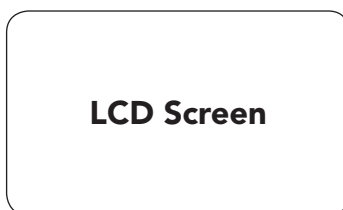

Up



Down

**NOTE:** these buttons can be assigned a function using the Configure Function menu

ENGINE  
OFF

## DESCRIPTION

The behavior of the Engine menu depends on the configuration of the **ENG ON** and **ENG STOP** settings in the **Configure Function menu**. For DCC decoders that take a single function on/off to turn the prime mover on/off (such as ESU Loksound or TCS WOWSound decoders), configure **ENG ON** to that function number and set **ENG STOP** to off (F--). The Engine menu will then change between OFF and ON when pressing the Up and Down buttons.

ENGINE  
OFF

ENGINE  
ON

If a decoder is edge triggered instead (requires a function on/off transition) to turn the prime mover on and off (such as Soundtraxx Tsunami2), set both **ENG ON** and **ENG STOP** to the appropriate function numbers. In this case, the Engine menu will display **STARTING** and **STOPPING** between the ON and OFF settings as the assigned functions are sent to the locomotive decoder.

ENGINE  
OFF

ENGINE  
STARTING

ENGINE  
ON

ENGINE  
STOPPING

ENGINE  
OFF

If the throttle is not in idle when attempting to turn off the prime mover, a warning will be displayed and the **ENG STOP** function will not be sent. Move the throttle back to idle to continue.

ENGINE  
NOT IDLE

### Example #1, F8 for ESU Loksound or F12 for TCS WOWSound:

ENG ON = F08      ENG ON = F12  
ENG STOP = F--      ENG STOP = F--

### Example #2, F5 (on, RPM+) and F6 (off, RPM-) for Soundtraxx Tsunami 2:

ENG ON = F05  
ENG STOP = F06

Advance to Tonnage Menu ●

Return to Main Screen ●

LCD Screen

● Start or turn on prime mover

● Stop or turn off prime mover

# Tonnage Menu

LIGHT    ▯  
ENGINE   ▯

LOW      ▯  
WEIGHT   ▯

MEDIUM   ▯  
WEIGHT   ▯

HEAVY    ▯  
WEIGHT   ▯

**Note:** the tonnage feature is a future release.  
Watch our website for updates.

8

Advance to Load Configuration Menu ●

Return to Main Screen ●


**LCD Screen**

● Increase tonnage value

● Decrease tonnage value




# Load / Save Configuration Menus

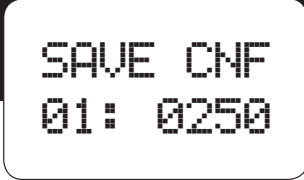

LOAD CNF: Advance to SAVE CNF  
 SAVE CNF: Advance to Set Locomotive Menu

Load selected configuration (and return to Main Screen) or Save current configuration (and return to Main Screen)

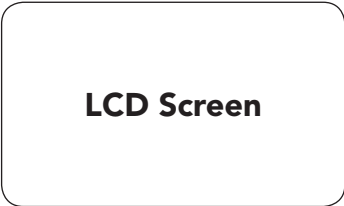

Increase configuration number

Decrease configuration number




## ELEMENT

## DESCRIPTION




**01:** Configuration Number. Up to 20 distinct configurations (locomotive address, function mappings, throttle notch settings, options) can be stored in the ProtoThrottle and loaded quickly using this menu.  
**0250** Locomotive Address. This is the locomotive address associated with the selected configuration number.



Save Configuration screen saves the **current loaded configuration** (with any changes you've made) into whatever configuration slot is on the screen. In order to copy an established configuration, you must load it into the throttle first before "saving" it to another slot.



Both the Load Configuration and Save Configuration functions will ask you to confirm before executing by pressing the Down button. To cancel, click the Menu button.

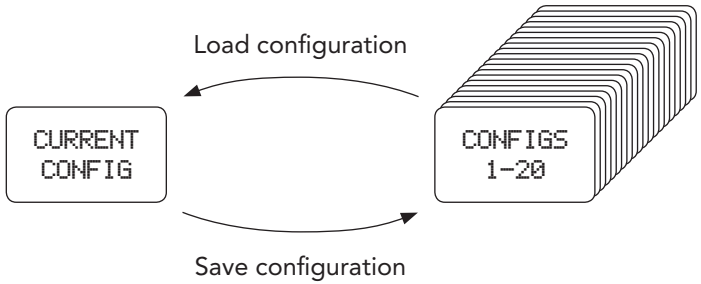

# Set Locomotive Menu




Advance to Force Function Menu ●

● None

Enter Set Locomotive Sub-Menu ●

● None

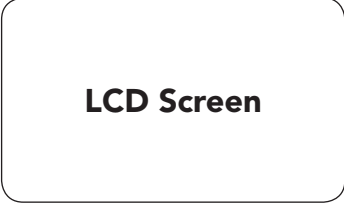

## ELEMENT

## DESCRIPTION

0250

Locomotive Address.

^

Digit Selector.

10

Move Digit Selector to the next digit ●

● Increase selected digit.

Save locomotive address and return to Set Locomotive Menu ●

● Decrease selected digit.



**NOTE:** To set a short (primary) address, press the decrease button once more when the first digit is zero. You will see an "s" which indicates "short". Move the digit selector to enter the remaining numbers. For example, a single digit address would be entered "s003"; a two digit address "s025", etc.

# Force Function Menu



Advance to Configure Function Menu ●

● None

Enter Force Function Sub-Menu ●

● None



**NOTE:** The Force Function menu allows any of the 29 standard DCC functions to be turned ON or OFF, regardless of any other ProtoThrottle lever or button. These can be used to test functions or control additional features of the decoder such as auxiliary, class, or lesser used lights.



### ELEMENT

### DESCRIPTION

F00

Function Number. Available range from function 0 to function 28.

---

Function Setting.  
 --- Function can be controlled by a ProtoThrottle button or lever  
 ON Function forced on, regardless of any other button or control  
 OFF Function forced off, regardless of any other button or control

Cycle through Function Numbers ●

● Cycle through Function Settings

Save function settings and return to Force Function Menu ●

● Cycle through Function Settings




# Configure Function Menu

CONFIG  
← FUNC

Advance to Notch Configuration Menu ●

Enter Configure Function Sub-Menu ●

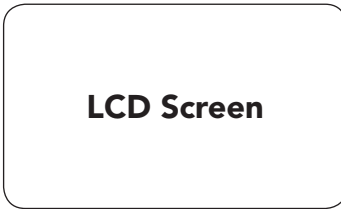

● Up

● Down

Configure Function Sub-Menu

HORN  
F02

## ELEMENT

## DESCRIPTION

HORN

Control Name. The name of the ProtoThrottle button or handle to which a function can be assigned.

HORN Horn lever

BELL Bell button

BRAKE Brake lever, when brake is activated

BRK OFF Brake lever, when in the full left position

AUX Aux button

ENG ON Prime mover ON/start function (see Engine menu for details)

ENG STOP Prime mover stop function (see Engine menu for details)

THR UNLK Function which, when active due to another control, allows the throttle to send speed commands when the reverser is in centered position. (e.g. Loksound Drive Hold)

REV SWAP Function which, when active due to another control, flips the direction of the reverser

F.HEAD Front headlight; active in the Bright and Ditch Lights settings

F.DITCH Front ditch lights; active in the Ditch Lights setting

F.DIM #1 Front dim headlight function #1; active in the Dim setting

F.DIM #2 Front dim headlight function #2; active in the Dim setting

R.HEAD Rear headlight; active in the Bright and Ditch Lights settings

R.DITCH Rear ditch lights; active in the Ditch Lights setting

R.DIM #1 Rear dim headlight function #1; active in the Dim setting

R.DIM #2 Rear dim headlight function #2; active in the Dim setting

UP BTN Main screen Up button

DOWN BTN Main screen Down button

F00

Function Number. The function to be activated when the associated ProtoThrottle button is pressed or control is moved. Available settings are none (F--) and functions 0 (F00) to 28 (F28).

MOM


Momentary / Latching Function. Only appears for the Up and Down button assignments.

MOM Momentary – the function is only active while the button is pressed  
LAT Latching – the function toggles on and off with each press of the button



Cycle through Control Names ●


Save function settings and return to Configure Function Menu ●

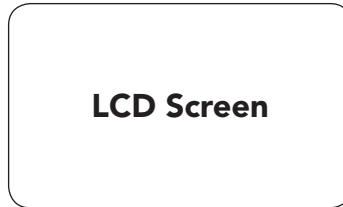

● Increase Function Number

● Decrease Function Number. Pressing this button when the Function Number equals zero turns the function off – no function will be activated when the control is operated.

# Notch Configuration Menu

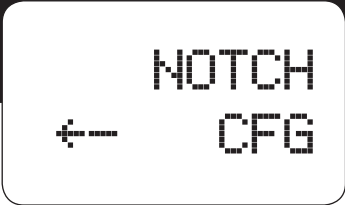

Advance to Options Menu ●


● None

LCD Screen

Enter Notch Configuration Sub-Menu ●

● None

Notch Configuration Sub-Menu



## ELEMENT

## DESCRIPTION

#

Notch Number.

102

Speed Step. The speed step to send when the throttle is in the selected Notch Number. Range from 1 to 126 (128 speed step mode only). Idle is always speed step zero.

14

Cycle through Notch Numbers ●

● Increase Speed Step

LCD Screen


Save notch settings and return to Notch Configuration Menu ●

● Decrease Speed Step

# Options Menu



Advance to Threshold Calibration Menu ●

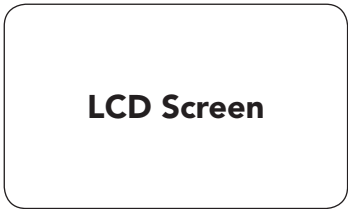

● None


Enter Options Sub-Menu ●

● None




## ELEMENT

## DESCRIPTION



**Variable Brake.** When set to ON, the brake effect will be proportional to the brake handle position. It is recommended to disable the emergency brake when variable braking is enabled. When set to OFF, the brake will be a simple on/off function.




Control status:

- PULSE braking
- STEP braking (works with TCS WOWSound function)

**Pulse braking.** The brake function will be pulsed at a duty cycle corresponding to the brake handle position, simulating varying amounts of braking force.

**Step braking.** This feature is for use with TCS WOWSound decoders only. As the brake handle is moved to the right, a greater percentage of the brake is applied.

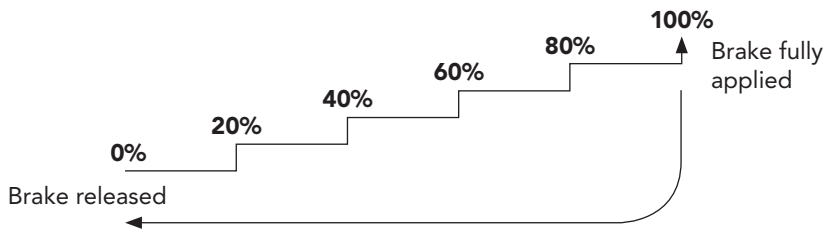

To disengage brake, handle must be **fully** released to the left.

**NOTE:** the only way to disengage the brake is to fully release the brake handle completely to the left. Also, the emergency brake feature must be disabled for step braking to work correctly.

*Continued on next page*

Options Sub-Menu

ELEMENT

DESCRIPTION

BRK RATE  
0.5s

Set pulse rate value (0.2 – 1.0 second)

This sets the rate at which brake commands are sent during pulse braking. A smaller value results in smoother braking but can result in a less responsive DCC system due to more commands being sent on the throttle bus.

BRK ESTP  
ON

**E-Stop on Brake Handle.** When set to ON, the brake handle can set emergency stop for the selected locomotive when moved completely to the right. When set to OFF, the brake handle will not cause an emergency stop to be set.

REV SWAP  
OFF

**Reverser Swap.** When set to ON, the reverser directions are swapped. This can be used to correct for a locomotive whose direction is set incorrectly or when changing the leading end of a back-to-back consist. When set to OFF, the reverser directions are normal.

Cycle through Options



Increase or set option value

Save setting and return to Options Menu



Decrease or set option value



# Threshold Calibration Menu

THRSHOLD  
← CAL

Advance to Communication Configuration ●

LCD Screen

● None

Enter Threshold Calibration Sub-Menu ●

● None



**NOTE: These settings are factory calibrated and do not, under most circumstances, need to be changed. Modify them at your own risk!**

HORN ○  
240

Threshold Calibration Sub-Menu

## ELEMENT

## DESCRIPTION

NAME

Control Name. The name of the ProtoThrottle control to be calibrated. Hold the control in the desired location and press the Up button to set the new calibration value.

HORN Threshold for the horn function activation

BRAKE Threshold for the brake function activation

BRAKE LOW Left brake handle stop

BRAKE HIGH Right brake handle stop; also threshold for emergency stop

○

Control Status. Shows the on/off status of the selected control.

○ OFF

● ON

240

Internal ADC value for the selected control. Can normally be ignored, unless you're developing code for the ProtoThrottle or are just a nerd.

Cycle through Control Names ●

LCD Screen

● Set new calibration value

Save threshold settings and return to Threshold Calibration Menu ●

● None

# Communication Configuration Menu




Advance to Preferences Menu ●

● None


Enter Communication Configuration Sub-Menu ●

● None

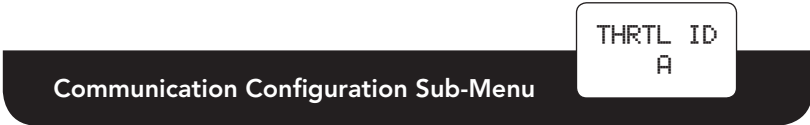


## ELEMENT


## DESCRIPTION



**Throttle ID.** Set each throttle to a unique ID using letters A-Z



**Base Address.** Set to the address of the ProtoThrottle receiver – see receiver instructions.



**Time Source Address.** Selects the fast time source. Set to “BASE” to display time information received from the command station by the ProtoThrottle receiver. To use an Iowa Scaled Engineering Wireless Fast Clock Master, set to the Node Address of the clock (0x01 to 0xFE). Set to “ALL” to display any time information received by the ProtoThrottle. The “ALL” setting works well with a single receiver in a private setting, but may result in erratic time display when multiple ProtoThrottle receivers are in close proximity (e.g. a public train show).

Cycle through Address/ID Names ●

● Increase

Save Address/ID settings and return to Communication Configuration Menu ●

● Decrease



# Preferences Menu




Advance to Diagnostics Menu ●

● None

Enter Preferences Sub-Menu ●


● None

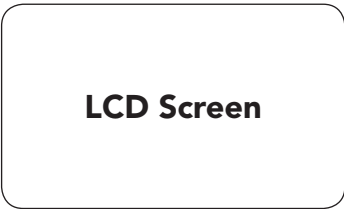


## Preferences Sub-Menu

### ELEMENT


### DESCRIPTION




**Sleep Delay.** Time until the throttle automatically enters low power mode. The throttle handle must be in idle, the reverser handle in centered position, and no buttons or controls actuated for this time. Range from 1 to 99 minutes.




**Clock Timeout.** Maximum time between fast clock time packets. If no time information is received in this interval, the clock display will show dashes to indicate it has lost communication with the fast clock master. Range from 1 to 25 seconds.



**Transmit Interval.** Time between periodic wireless transmissions to the ProtoThrottle receiver. This setting is locked and should not normally need to be changed by the user.



**Transmit Holdoff.** Minimum time between wireless transmissions to the ProtoThrottle receiver. This setting is locked and should not normally need to be changed by the user.




**LED Blink.** When set to ON, the LED on the ProtoThrottle will blink green when communication with a ProtoThrottle receiver is active. When set to OFF, the LED will remain off when communication is active. The LED will always blink red when no communication link has been established.

**Continued on next page**

Preferences Sub-Menu


ELEMENT

DESCRIPTION



**Reverser Lock.** When set to ON, the reverser can only change the locomotive direction when the throttle is in idle, just like the prototype (in fact, on the prototype, the reverser handle is locked and cannot be moved). If the reverser is moved when the throttle is not in idle, the direction will remain the same and the Main Screen will display **REV!**. When set to OFF, the reverser is allowed to change the locomotive direction regardless of the throttle setting.

Cycle through preference settings

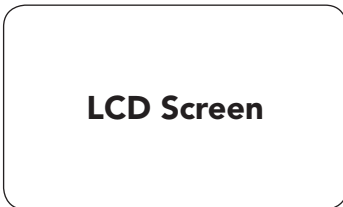

Increase value or turn on setting

Save preference settings and return to Preferences Menu



Decrease value or turn off setting



## Diagnostics Sub-Menu

ELEMENT	DESCRIPTION
	<b>Controls Display.</b> Shows the current status of the ProtoThrottle controls and buttons.
	<b>Sleep Timeout.</b> Shows the number of seconds until the throttle goes to sleep.
	<b>Packet Timeout.</b> Timer reset by each packet received from the ProtoThrottle receiver. Communication is considered lost when the bar reaches zero.
	<b>Received Signal Strength Indicator.</b> Reports the strength of the wireless connection to the throttle.
	<b>Fast Time Ratio.</b> Reports the fast time ratio from the last update received.
	<b>Battery Voltage</b>
	<b>ProtoThrottle Firmware Version</b>
	<b>ProtoThrottle Firmware Short Git Hash</b>

*Continued on next page*

## Diagnostics Sub-Menu

### ELEMENT

BASE TYP  
CAB BUS

BASE REV  
000000

FACTORY  
RESET 5→

### DESCRIPTION

**Base Type.** The type of ProtoThrottle receiver to which the ProtoThrottle is connected.

---

**Base Unit Short Git Hash**

---

**Factory Reset.** Press the Down button 5 times to reset the ProtoThrottle to factory settings. **WARNING: This will erase all configuration settings, except those in the Threshold Calibration menu, so use with caution!**

Cycle through diagnostics settings ●

Return to Diagnostics Menu ●


LCD Screen


● None

● None

# Menu Map

Click **Select** button to SAVE any input. Note: pressing and holding the Menu button momentarily will return you to the main screen from anywhere within the main menus (grayed screens).

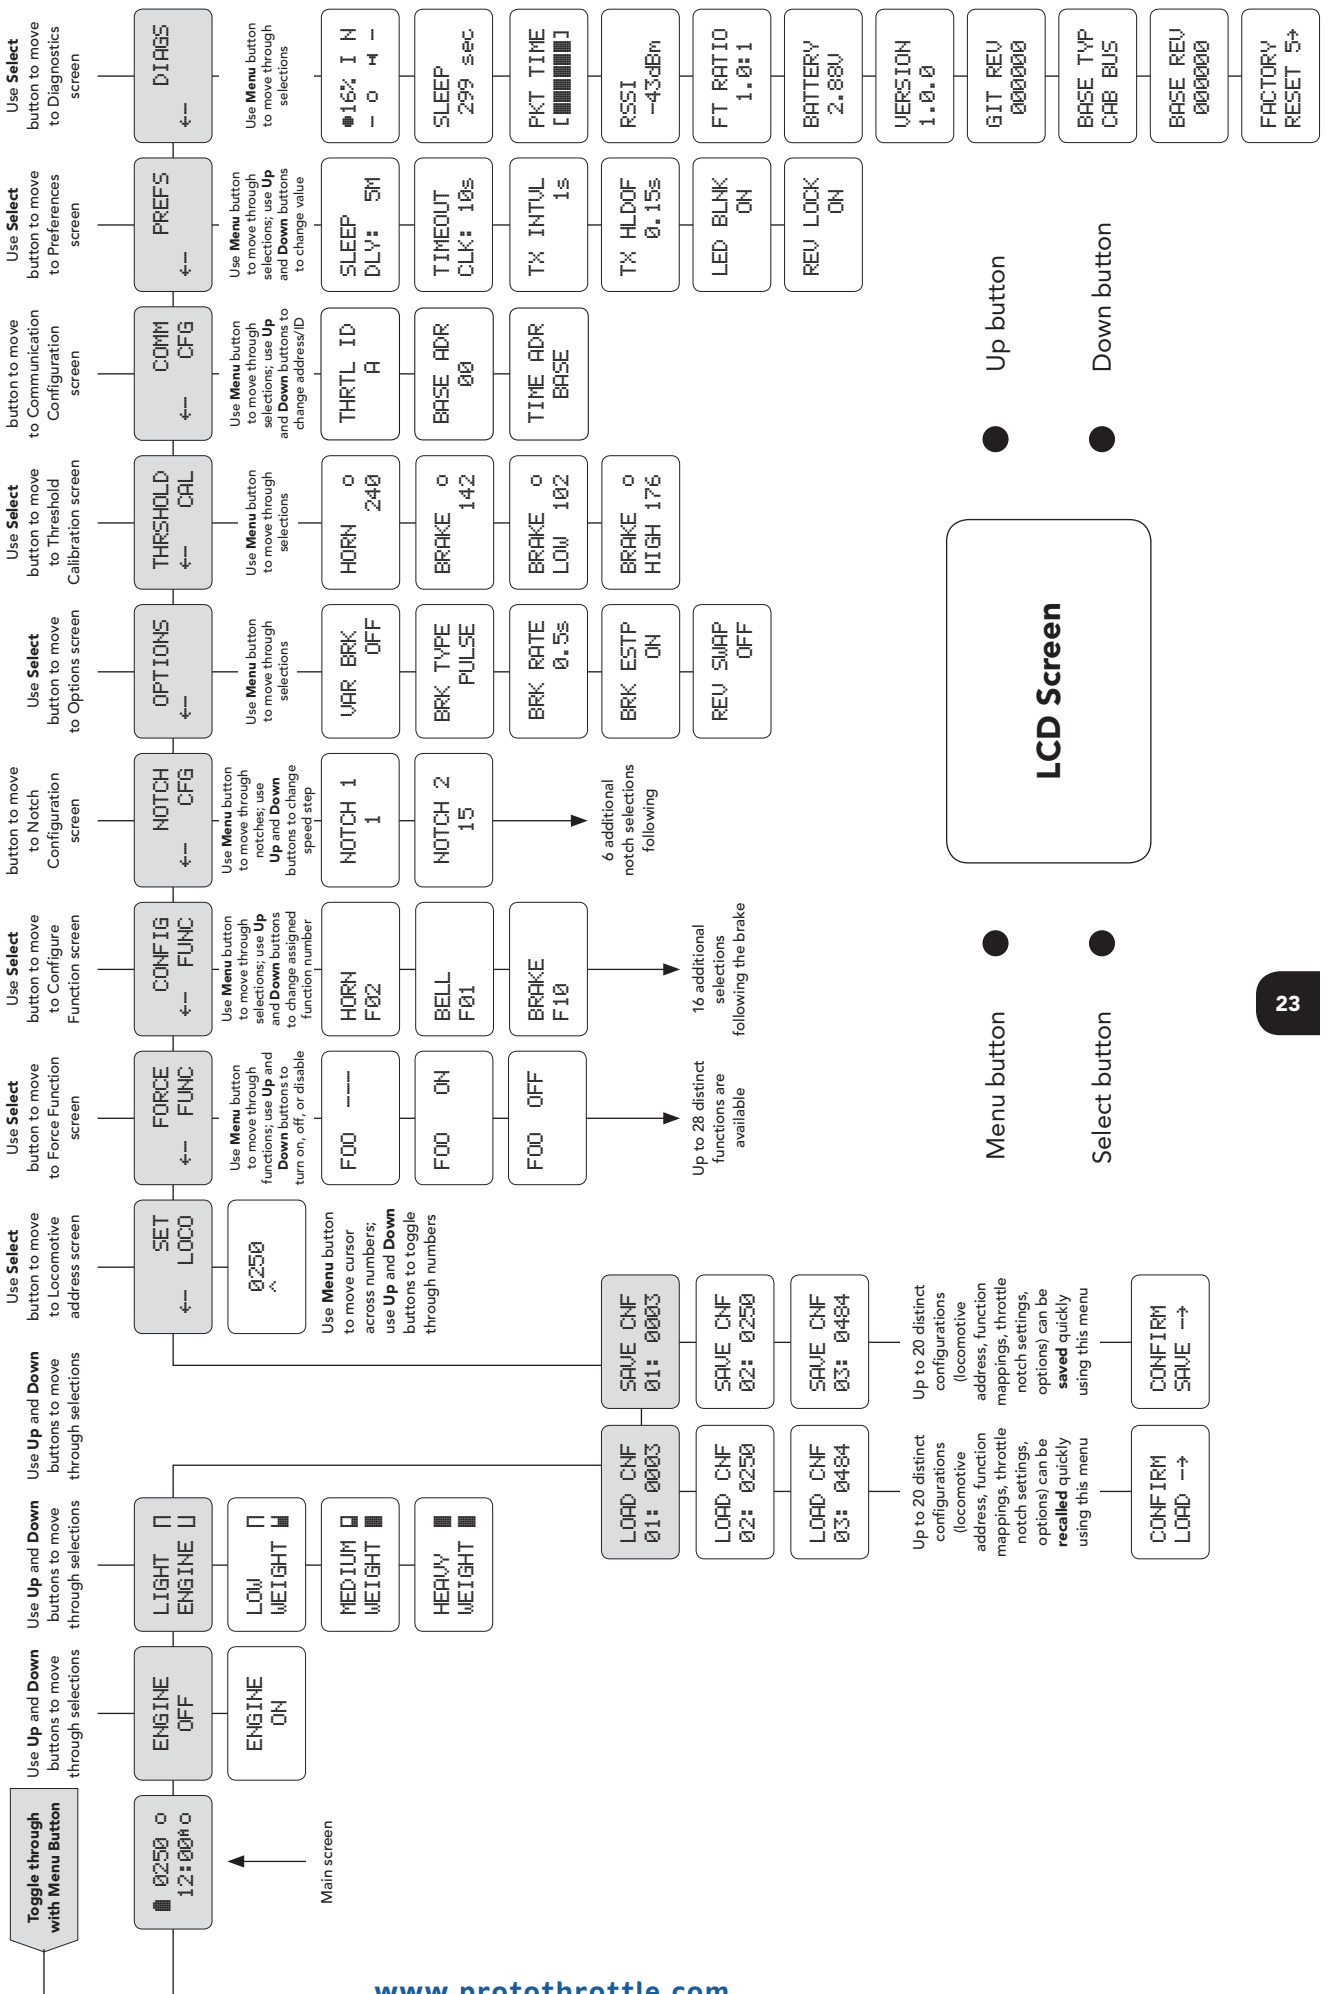

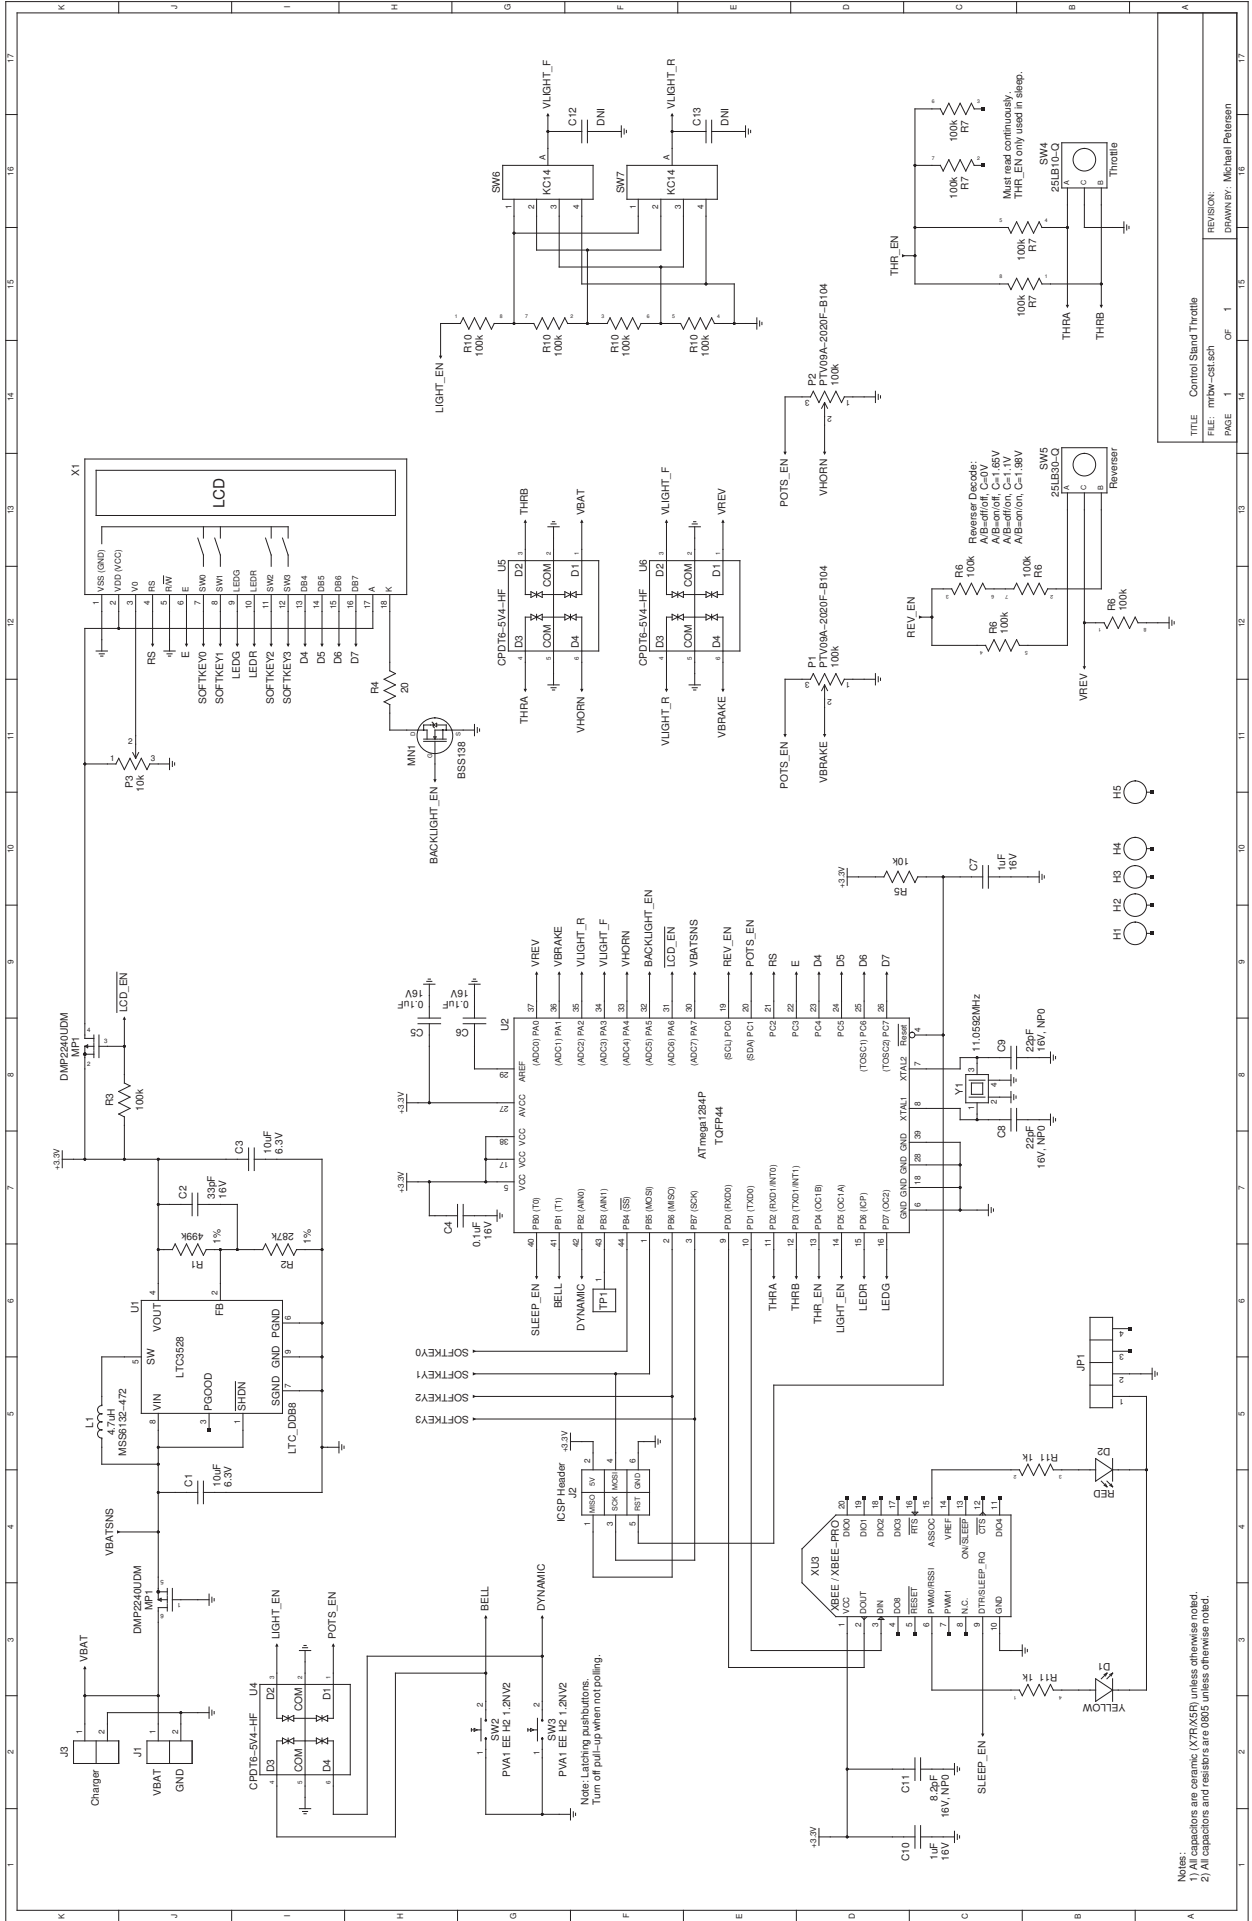

TITLE	Control Stand Throttle
FILE:	mrbw-csl.sch
PAGE	1 OF 1
REVISION:	
DRAWN BY:	Michael Peterson



### **Open Design**

Iowa Scaled Engineering is committed to creating open designs that users are free to build, modify, adapt, improve, and share with others.

### **Hardware**

The design of the ProtoThrottle hardware is open source hardware, and is made available under the terms of the Creative Commons Attribution-Share Alike v3.0 license, a copy of which is available from: <http://creativecommons.org/licenses/by-sa/3.0/>

Design files can be found on the Iowa Scaled Engineering's Github site: <https://github.com/IowaScaledEngineering/mrbw-cst>

### **Firmware**

The official Iowa Scaled Engineering firmware for the ProtoThrottle is free software: you can redistribute it and/or modify it under the terms of the GNU General Public License as published by the Free Software Foundation, either version 3 of the License, or (at your option) any later version. A copy of the GNU GPL can be found at: <http://www.gnu.org/licenses/gpl.html>

New firmware can be flashed into the ProtoThrottle through J2. The six pins are a standard AVR 6-pin ISCP programmer connection.

We encourage you to join the ProtoThrottle group forum: <https://groups.io/g/ProtoThrottle>  
The forum will help with general and technical questions regarding the ProtoThrottle.

**Visit the Iowa Scaled Engineering website  
to learn more about our full line of  
model railroad electronics.**

[www.iascaled.com](http://www.iascaled.com)  
[support@iascaled.com](mailto:support@iascaled.com)

© 2018 Iowa Scaled Engineering, LLC and Designgrid, LLC

[www.protothrottle.com](http://www.protothrottle.com)

**ProtoThrottle**  
**Model: MRBW-CST**  
**HW Version: 1.2**

Iowa Scaled Engineering, LLC  
22750 County Road 37  
Elbert, CO 80106  
[support@iascaled.com](mailto:support@iascaled.com)

**Contains FCC ID: OUR-XBEEPRO**

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modification to the device could void the user's authority to operate the equipment.

---

**Contains Model XBee-PRO Radio, IC: 4214A-XBEEPRO**

This device complies with Industry Canada's licence-exempt RSSs. Operation is subject to the following two conditions:

- (1) This device may not cause interference; and
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

Cet appareil est conforme aux RSS exempts de licence d'Industrie Canada. L'opération est soumise aux deux conditions suivantes:

- (1) Cet appareil ne doit pas causer d'interférences; et
- (2) Cet appareil doit accepter toute interférence, y compris les interférences susceptibles de provoquer un fonctionnement indésirable de l'appareil.

Changes or modification to the device could void the user's authority to operate the equipment.

Des changements ou des modifications à l'appareil pourraient annuler l'autorité de l'utilisateur à utiliser l'équipement.





**IOWA SCALED ENGINEERING – ELECTRONICS MADE EASY!**

[www.protothrottle.com](http://www.protothrottle.com)